# BC370 / BC370B

# Bluetooth Handsfree CarKit

# About Bluetooth Carkit

The Handsfree car kit allows you to make and receive handsfree calls in your car; you can connect the handsfree car kit to a compatible mobile phone that supports Bluetooth® wireless technology.

# ILLUSTRATION





- Speaker
- ② Mute Button
- Led indicator
- ④ Volume increase(+) Button
- ⑤ Volume decrease(-) Button
- ⑥ Multi-Function Button(MF-button)
- ⑦ Microphone
- ⑧ USB charging port

# CHARGING THE BATTERY

When battery power is low, the red LED indicator 3 will flash and you will hear a beep every 30 every seconds.

1. Plug the USB cable (8) into your computer, USB car charger.

2. Plug the other end of the USB cable (1) into your computer or USB car char

3. The red LED indicator (3) on the Car Kit will light up and your Car Kit will start charging. When fully charged, the red LED indicator (3) will turn OFF

Attention! Make sure that the Bluetooth® Car Kit is fully charged before using the device.

# TURNING ON / OFF

Turning ON: Press and hold the MF-button @ until vou hear a melody and the blue LED indicator ③ starts flashing.

Turning OFF: Press and hold the MF-button (6) until you hear a melody and the red LED indicator (3) lights up briefly before turning off again.

#### Attention!

The Bluetooth®Car Kit will turn OFF automatically if there has been no Bluetooth® connection between the Bluetooth®Car Kit and another mobile device for more than 30 minutes.

#### FIRST USE PAIRING

You are required to pair the Bluetooth<sup>®</sup> Car Kit with your mobile phone once before using it! Make sure that the Bluetooth® Car Kit is turned OFF

→ Press and hold the MF-button ⑥ until the LED indicator (3) starts flashing by blue and orange colors alternately.

→ Let your phone search for Bluetooth<sup>®</sup> devices. → Select the BC370 Car kit / BC370B Car kit in your mobile phone and enter the PIN code 0000 (\*) to pair both devices. You will hear a beep.

→ The blue LED indicator ③ will light.

(\*) Not required if your phone has Bluetooth® version 2.1 or higher

#### Attention!

· Make sure that the Bluetooth® function of your mobile phone is ON and that it is in close proximity to the Bluetooth® Car Kit.

 To ensure automatic reconnection between the phone and the Bluetooth® Car Kit, we recommend setting the Bluetooth® Car Kit as "Authorized" in the Bluetooth®menu of your phone! Please refer to the manual of your mobile phone for more detailed information

 If the Bluetooth<sup>®</sup> connection is not restored automatically after disconnection, you can always restore the connection manually in the menu of your mobile phone.

# MAKING CALLS

Incoming call: Press MF-button @ once to ANSWER a call.

Incoming call: Press and hold MF-button @ (2 sec.) to REJECT a call.

During a conversation: Press MF-button @ once to END a call

During standby mode: Press MF-button @ twice to REDIAL the last dialed number.

During Standby mode: Press MF-button @ once to activate voice dialing (\*)

(\*) The voice dialing function is only available if it is supported by your mobile phone!

# VOLUME / MUTE

#### Adjusting the volume:

Press "+" (4) to increase the volume level. You will hear a beep when max. volume is reached.

Press "-" (5) to decrease the volume level. You will hear a beep when min. volume is reached.

# Turn ON MUTE mode:

During a conversation, press MUTE-button ② once to temporarily turn off the microphone.

# Turn OFF MUTE mode:

During a conversation, press 1x MUTE-button (2) to turn the microphone back ON.

Reset: Press the "-" (5) and "+" (4) buttons at the same time for 10 seconds until you hear a beep and the LED indicator (3) starts flashing by blue

and red colors alternately. Your unit has now been reset to default settings.

# MULTIPOINT Bluetooth®

Bluetooth® Car Kit supports MULTIPOINT connection, which allows you to connect and use 2 different Bluetooth® telephones AT THE SAME TIME with your Car Kit.

When 2 phones are connected to the Bluetooth® Car Kit you always have:

• Primary phone (1st phone connected to the Car Kit)

Secondary phone (2nd phone connected to the Car Kit)

#### Attention!

NO Voice dial, NO redial possible for 2nd phone.

#### Multipoint pairing procedure

► PAIRING phone 1

Pair the 1st phone with the Bluetooth<sup>®</sup> Car Kit as described under "FIRST USE PAIRING".  $\rightarrow$  Connect the phone to the Car Kit.

PAIRING phone 2

Make sure Bluetooth<sup>®</sup> Car Kit.  $\rightarrow$  Press and hold the MF-button © of the Bluetooth<sup>®</sup> Car Kit to enter pairing mode again. The blue & red indicators will flash alternately.  $\rightarrow$  Pair and connect with the 2nd phone.

#### Attention !

After the 2nd phone is paired and connected, the 1st phone will be DISCONNECTED from the Car Kit. — Turn OFF the Bluetooth®Car Kit and then turn ON again, using the MF-button <sup>©</sup>.

 $\rightarrow$ Bluetooth<sup>®</sup>Car Kit will reconnect with both phones automatically.

#### Multipoint Connection Procedure

When the Bluetooth® Car Kit is switched ON, it will automatically search and connect with the 2 last mobile phones that had Bluetooth® connection with the Car Kit.

▶ If only 1 phone is available: only one phone will be connected to the Bluetooth<sup>®</sup> Car Kit. This phone will be the primary phone.

► One or both phones are shortly disconnected: the Car Kit will automatically reconnect.

#### Attention!

To ensure automatic reconnection between the phones and the Bluetooth® Car Kit, we recommend setting the Bluetooth® Car Kit as "Authorized" in the Bluetooth® menu of your phone! Please refer to the manual of your mobile phone for more detailed information.

If for any reason one of the 2 phones, or both phones, will spontaneously lose the Bluetooth<sup>®</sup> connection with the Bluetooth<sup>®</sup> Car Kit, it will automatically make a reconnection. If this automatic reconnection fails, you can always restore the Bluetooth<sup>®</sup> connection manually in the menu of your mobile phone.

# Receiving calls on the 2 phones

If during a telephone conversation another incoming call is received on the 2nd phone, you will hear a BEEP.

Now you can:

Answer the incoming call on 2nd phone: Press the MF-button © twice to HOLD the call on the 1st phone and answer the call on the 2nd phone. When you have accepted the 2nd call, you can:

Switch between 2 phones: Press the MF-button
6 twice to switch between the 2 phones.

► End one of thecalls: Press the MF-button ⑥ once to end the current call and continue with the other call.

# LED INDICATOR ③

Red indicator:

- Flashes in Standby mode: low battery capacity.
- Lights continuously while charging the battery.

Lights continuously in mute mode.

Blue indicator:

► Flashes in Standby mode & talking mode. Orange & Blue indicators:

Flash alternately in pairing mode.

# MICROPHONE ⑦

Make sure that the microphone () is directed towards your mouth. For optimum performance, the microphone () should be located at a distance of 30-50 cm from the driver's mouth. Make sure that there are no obstacles in front of the microphone () of the Bluetooth<sup>®</sup> Car Kit.

#### MUSIC STREAMING

Once your mobile phone and theBluetooth<sup>®</sup> Car Kit have been paired and connected, you can stream music from your phone to the Bluetooth<sup>®</sup> Car Kit. The music will be muted automatically during a call.

# LOW VOLTAGE PROTECTION OF BATTERY

When the battery voltage drops to 3.3V, the red LED (3)will flash during Standby mode; and the Bluetooth® Car Kit would be shutdown automatically when the battery voltage is below 3.0V.

#### RESET TO DEFAULT SETTING

Press the "-"() and "+"() buttons at the same time for 10 seconds until you hear a beep and the LED indicator () starts flashing by blue and red colors alternately. Your unit has now been reset to default settings.

# TECHNICAL DATA

Bluetooth<sup>®</sup> Specification: Version 4.0, up to a range of 10 meters Supported Bluetooth<sup>®</sup> profiles: HSP, HFP, A2DP Battery: 3.7V/650mAh Lithium polymer rechargeable battery Operational temperature: +5°C to +45°C Storage temperature: -10°C to +60°C

CE